

## ZERK-LOCKER™ INSTALLATION

---

### Required Tools :



- 1X 14mm wrench (For the Zerk-Locker™ and the standard coupler)
- 1X 12 mm wrench (Regular size for hose)

1

Prepare your tools and take Zerk-Locker™ out of packaging.




2



Unscrew standard nozzle that comes with hose. Use 14mm wrench for nozzle head and 12mm wrench for hose. A different wrench size may be necessary depending on grease gun model you use.

3

Manually tighten Zerk-Locker™ onto hose using wrenches mentioned above

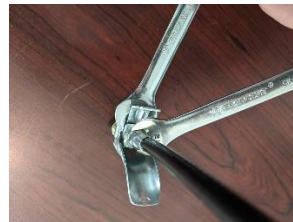

4



Your Zerk-Locker™ is ready to use!



## HOW TO USE YOUR ZERK-LOCKER™

---

1. Press down on handle in order to open the jaws
2. **COMPLETELY** release handle once jaws are positioned on the grease zerk
3. Do not touch your Zerk-Locker™ while greasing
4. Proceed to grease
5. Press down on handle to easily release jaws from grease zerk.

## IMPORTANT!

Your Zerk-Locker™ is designed to stay attached by itself to the grease zerk. Holding the handle or applying pressure to the handle while in use will interfere with proper functioning and cause leaking. Do not touch the Zerk-Locker™ while greasing.

Also, please note that it is a quick coupler. As with any similar product, the zerks on your machinery need to be clean and in good working order for the Zerk-Locker™ to work properly. If not, grease leaks can happen. We highly recommend that our customers clean all grease zerks on their machinery prior to using the coupler. The zerks will stay clean since the Zerk-Locker™ prevents leaks. Replace all defective zerk.

**WARRANTY :** If you follow the using instructions and your Zerk-Locker™ is defective, please contact us. Your product warranty is valid for 1 year. We will replace it for free. That is the Agri-Can™ promise!